



The illustration above displays the ceiling mounting arrangement for the CF 5 loudspeaker and identifies the essential hardware supplied.

## **Components**

- Loudspeaker Mount BCA-I
- Anchor Bolts M8

- Ceiling Extension BCA CE -18 or BCA CE-24 with U clamps
- CF 5 Loudspeaker

## **CF 5 Ceiling Mounting**



## How to mount BCA CE 18" or 24" to a ceiling?

- o Mark the position of the anchor bolts using the BCA CE 18" or 24" as template on the RCC ceiling.
- o Drill holes of adequate size to fix an M 8 anchor bolt into the RCC ceiling.
- o Insert the anchor bolt into the drilled holes.
- o Place the BCA 18" or 24" Extension's top plate on the RCC and tighten the bolts.

## **How to mount the Loudspeaker?**

- o Tighten the BCA-I clamp on the BCA CE 18" or 24" as shown in the diagram using the U bolts provided with the extension
- o To fix the loudspeaker tighten the bolts (fixed and removed from the loudspeaker) to the BCA-I clamp